

# Ultra-PopUp Pool™ 20 Instructions

## Instructions for the 20 gallon unit only.

### Part No. 8020

The 20 gallon Ultra-PopUp Pool™ is a terrific spill response product for a variety of uses: Catching the fluid leaking from hydraulic lines, leaking pipes and machinery, containment for leaking packages, or catch-all for many spill applications.

#### HOW TO DEPLOY THE Ultra-PopUp Pool™ FOR USE:

Using the Ultra-PopUp Pool™ is foolproof. Simply remove it from the Carrying Bag, and it will instantly open up into its full size, ready for placement under a leak or spill.

STEP 1: Remove PopUp Pool™ from its Carrying Bag.

STEP 2: Allow the PopUp Pool™ to open to its full diameter and size.

STEP 3: Place PopUp Pool™ under the leak, centered under the leak if possible.

#### CAUTION:

- \* Do not use the PopUp Pool™ with chemicals that are incompatible with polyethylene.
- \* Do not use the PopUp Pools™ on inclines greater than 30 degrees. Use on an incline will reduce the containment capacity depending on the incline.
- \* Do not place the PopUp Pool™ over sharp objects or materials.

#### HOW TO REUSE THE Ultra-PopUp Pool™

STEP 1: Remove the spilled contents from the PopUp Pool™. Use sorbents to wipe liner clean.

STEP 2: Wash with a mild detergent and water if necessary and properly dispose of the contaminated solution. Once dry, inspect for tears, pinholes or other performance reducing damage.

**Do NOT** place a unit back into service if it is not in its original condition. If the PopUp Pool™ is determined to be suitable for reuse, refold the PopUp Pool™ per the Refolding Instructions on the back. Place the PopUp Pool™ back into the Carrying Bag.



11542 Davis Creek Court • Jacksonville, Florida 32256 USA  
(904) 292-1611 • 1-800-353-1611 • FAX (904) 292-1325


**The Leak Stops Here.™**

# HOW TO REFOLD THE 20 Gallon Ultra-PopUp Pool™

**DISCLAIMER:** The manufacturer assumes no liability for any claims arising from the use of this product where the product has been improperly stored, used or folded.


## STEP 1:

Hold the PopUp Pool™ so that the open side of the Pool is away from your body. Grab the Pool at the 10 o'clock and 2 o'clock positions with your thumbs to the inside of the Pool over the top foam ring and your fingers are grabbing the back of the Pool.

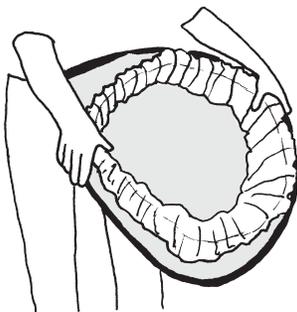

## STEP 2:


Push the front edge of the PopUp Pool™ against a wall or solid object to cause the Pool to fold into a "C" shape.

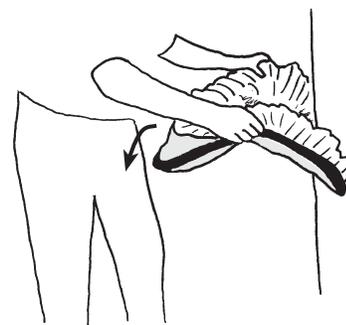

## STEP 3:


NOTE: (A) shown in these steps is used only as a reference point to help show the folding technique.

With the PopUp Pool™ in a "C" shape, bring your hands together so the sidewalls of the Pool almost touch.

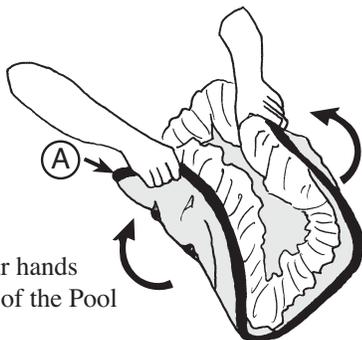

## STEP 4:

Rest the bottom edge of the PopUp Pool™ against your thigh, then keeping your left hand steady, turn your right hand into the center, toward your body.

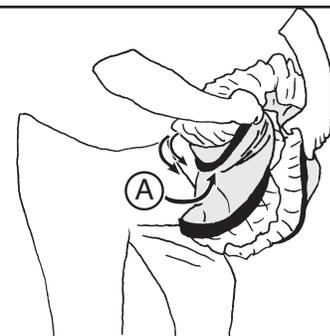

## STEP 5:

With your right hand fold the loop you made under your left hand. See how reference point in (A) illustrations tucks under, forming a small loop.



## STEP 6:

Once the right hand has formed the middle loop and turned it under, push down with the top hand to form the top loop.



## STEP 7:

Pull the bottom loop over the middle loop that was made and pull the top and bottom loops together.



## STEP 8

Flatten the unit to remove trapped air. Adjust the loops to equal sizes if necessary. Place the unit back into the Carrying Bag and close.



**DO NOT** force the PopUp Pool™ to refold if the sprung steel wire seems to be resisting your folding efforts. Forcing the refolding when done improperly can cause permanent damage to the sprung steel wire and render the PopUp Pool™ less usable or unusable. **PRACTICE, PRACTICE, PRACTICE.** Once you learn the refolding technique, it should only take 10 - 12 seconds to perform this procedure.

## PROPER STORAGE PROCEDURES

Always store the PopUp Pool™ in its Carrying Bag. This protects the polyethylene from potentially harmful ultra violet degradation. Every 4 - 6 months remove the PopUp Pool™ from its Carrying Bag and inspect it to make sure it is still usable. If it shows signs of wear or deterioration, remove the product from active use and reorder.