



**Viton®** fluoroelastomer

A Product of DuPont Dow Elastomers

## Bisphenol-Cure Viton® Fluoroelastomers In Compliance With FDA Regulation 21 CFR 177.2600

### Introduction

This data sheet pertains to the U.S. Federal Food and Drug Administration regulations that provide for the use of vulcanizates of Viton® fluoroelastomer in the formulation of rubber articles intended for use in repeated food contact applications (21 CFR 177.2600).

Prior to the establishment of compliance for the bisphenol-cured types of Viton® listed in this data sheet, only Viton® A-HV, A, A-500, and E-60 were in compliance with FDA regulation 21 CFR 177.2600. These polymers can be crosslinked using Diak™ No. 1 (hexamethylenediamine carbamate) and Diak™ No. 4 (4,4-bis[aminocyclohexyl] methane carbamate) as long as the concentration does not exceed 1.5 phr (parts per hundred rubber) of Diak™ No. 1 or 2.4 phr of Diak™ No. 4.

Extraction data submitted in the petition to FDA were obtained from vulcanizates of the compounds shown below:

Viton® A	100	100
Magnesium Oxide	15	15
Diak™ No. 1	1.25	—
Diak™ No. 4	—	2.0

Vulcanizates were press-cured 30 min at 163°C (325°F) and oven post-cured for 24 hr at 204°C (400°F).

Compounds based on Viton® dipolymer cured with diamines are relatively scorchy and exhibit poorer resistance to heat aging and compression set than similar polymers crosslinked with the bisphenol cure system. Viton® polymers crosslinked with the bisphenol cure system provide compounds having excellent processing safety and bin storage stability, much improved resistance to heat aging and aqueous media, such as steam and acids, and unsurpassed resistance to compression set. Compression set resistance correlates directly with retention of sealing force: the better the resistance of a vulcanizate to compression set, the longer it will function as an effective seal.

As of October 1996, a broad range of Viton® bisphenol-cure precompounds, listed below, were determined to be in compliance with the FDA food contact regulation 21 CFR 177.2600. These Viton® bisphenol-cure precompounds include a wide range of viscosities, for the maximum versatility in manufacturing processes. In addition, the list includes A-, B-, and F-types of Viton®, to provide for the greatest possible flexibility in terms of end-use properties and service capabilities.

**Viton® Bisphenol-Cure Precompounds  
In Compliance  
With FDA 21 CFR 177.2600**

A-Types	B-Types	F-Types
A-201C	B-601C	F-605C
A-401C	B-600*	
A-601C		
A-200*		
A-500*		
A-HV*		

\*In addition to the incorporated cure precompounds listed above, the gum polymers shown are also in compliance with 21 CFR 177.2600, provided that the curative used is VC #50, at levels less than, or equal to, 2.50 phr of rubber.

Only the Viton® precompounds and the Viton® gum polymers (cured with VC #50) listed above are in compliance with FDA regulation 21 CFR 177.2600. Bisphenol-cured types of Viton® not included in the above list have not been established to be in compliance with 21 CFR 177.2600, such as Viton® E-60C, E-430, B-910, and any Viton® gum polymer cured with Viton® Curatives No. 20 and 30.

There have been no changes, relative to compliance with FDA regulations for the previously listed Viton® types, including Viton® A, A-500, E-60, and A-HV, cured with Diak™ No. 1 and Diak™ No. 4 within the limits described above in paragraph 2 of this data sheet.

## Compounding Notes

### Test Compounds

Data for establishing compliance with the FDA standards for the bisphenol-cured Viton® products were obtained from vulcanizates having the formulation shown below:

Viton® Precompound	100
High Activity MgO	3
Calcium Hydroxide	6

Extraction testing was performed on test slabs that were press-cured for 10 min at 177°C (350°F), followed by an oven post-cure of 24 hr at 232°C (450°F).

### Metal Oxides/Acid Acceptors

Magnesium oxide and calcium hydroxide are regulated under the provisions of FDA 21 CFR 184.1(b)(1) as being Generally Recognized As Safe (GRAS) and may be used in fluoroelastomer compounds designed for food contact, provided they meet Food Chemicals Codex specifications and are used in accordance with Good Manufacturing Practice.

### Gum Polymers + Viton® Curative #50

Viton® A-200, A-500, A, E-60, A-HV, B-200, and B-600 are readily cured with Viton® Curative No. 50, and, provided the level of VC No. 50 does not exceed 2.50 parts per hundred of rubber, such combinations of polymer and curative are also in compliance with the FDA regulations.

### Blends of Different Viscosity Viton® Bisphenol-Cure Precompounds

High and low viscosity precompounds can be blended together to obtain intermediate compound viscosities. This capability can be used to optimize the processibility of a compound for particular manufacturing processes. For example, a 50/50 (wt%) blend of Viton® A-201C/A-401C will result in a nominal 30 Mooney Viscosity (ML 1+10 at 121°C [249°F]) polymer.

### Blends of Viton® Gum Polymers With Bisphenol-Cure Precompounds

The Viton® gum polymers listed in this data sheet can be blended with bisphenol cure-containing precompounds to lower the state of cure in a compound. Blending gum polymer with curative-containing precompounds reduces the level of curative, resulting in vulcanizates with lower modulus, higher elongation, increased tear resistance, and greater resistance to flex fatigue. Reducing the state of cure of a given compound will also result in some decrease in resistance to compression set (see Table 3).

### FDA Regulated Fillers

(As of October 1996, the use of all carbon blacks, including those previously approved for use in food contact applications, was under question. Refer to your supplier of carbon black for updated information.)

Recommended fillers for use in compounds of Viton® that are in compliance with FDA regulations include USP grade barium sulfate and titanium dioxide. Both these fillers are approved for use in items intended for repeated (food contact) use, under 21 CFR 177.2600, section v., and both of these fillers provide compounds that exhibit excellent processing and physical property characteristics (see Tables 1, 2, and 3).

### Summary

Table 1 outlines representative processing and physical properties of barium sulfate-filled compounds based on various types of bisphenol-cured Viton® products which are in compliance with FDA regulation 21 CFR 177.2600, compared to a Viton® A-type cured with Diak™ No. 4.

Table 2 compares two different fillers approved for use in food contact applications in 60A and 80A durometer compounds based on A- and F-types that are in compliance with FDA regulation 21 CFR 177.2600.

Table 3 shows examples of various blends of compliant grades of Viton®, demonstrating the effect on physical properties of reducing the level of cross-linking agent by blending precompounds with gum polymer.

Figure 1 depicts the advantages in heat aging, resistance to steam, and compression set provided by bisphenol-cure Viton® precompounds, compared to diamine-cured Viton® A.

Figure 1a displays the percent change in tensile strength, elongation at break, and hardness (change in number of points) for the formulations listed in Table 1, after aging for two weeks at 250°C (482°F). The bisphenol cure provides a marked improvement in retention of elongation at break. Thus, in applications involving exposure to high heat, bisphenol-cure Viton® precompounds will retain flexibility significantly better than diamine-cured Viton® A.

Figure 1b shows the excellent retention of elongation at break and the much reduced change in hardness typical of bisphenol-cured Viton® polymers after aging for two weeks in 80 psi (3160°C [320°F]) steam. Viton® A, cured with Diak™ No. 4, shows a significantly higher loss in elongation at break and a much greater increase in hardness than the bisphenol-cure

Viton® precompounds. This significant improvement in steam resistance offers the potential for much longer seal life and greater operational capability, particularly with regard to steam cleaning of food-related process systems.

Figure 1c compares compression set values (method "B," measured on O-rings) for bisphenol-cured compounds of Viton®, versus a compound based on Viton® A, cured with Diak™ No. 4. The crosslinks established during vulcanization using the bisphenol cure system have significantly greater thermal stability than those created using diamines, and this increased stability is reflected in the superior resistance to compression set provided by this cure system. Improved compression set resistance results in improved seal life in actual service.

## Handling Precautions

Under ordinary handling conditions, Viton® fluoroelastomer polymers and products based on them present no health hazards of which DuPont Dow Elastomers is aware. However, there are potential hazards that result from the use of certain compounding ingredients or from high temperature processing and service conditions. Before proceeding with any compounding or processing work, consult and follow label directions and handling precautions from suppliers of all ingredients.

For a complete review of handling precautions and the health and hazard-related information on Viton®, see DuPont Dow technical bulletin "Handling Precautions for Viton® and Related Chemicals," and the Material Safety Data Sheet for the specific products of interest.

Figure 1b. Change in Properties After Two Weeks in 80 psi Steam

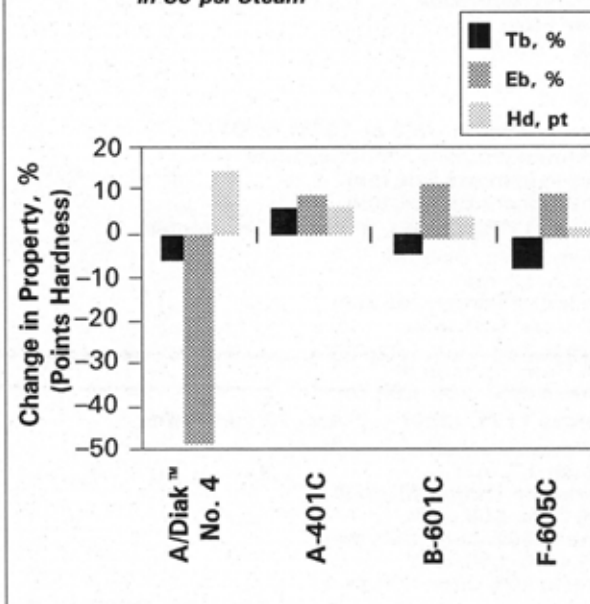


Figure 1. Bisphenol-Cured Viton® Precompounds versus Diamine-Cured Viton® A

Figure 1a. Change in Properties After Two Weeks at 250°C (482°F) Oven Aging

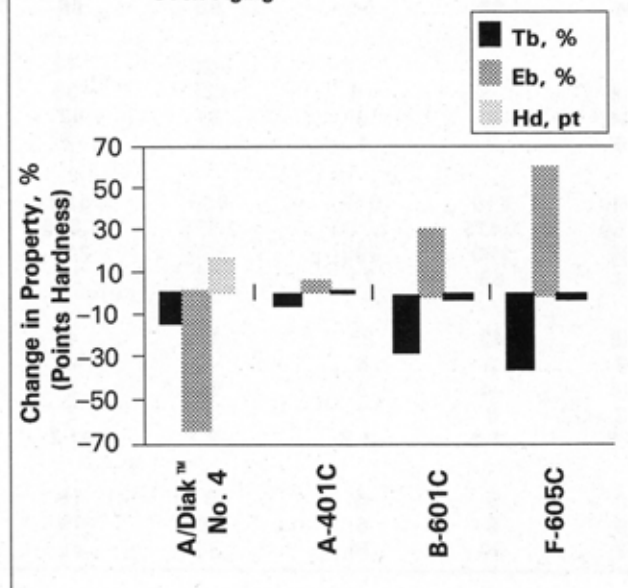
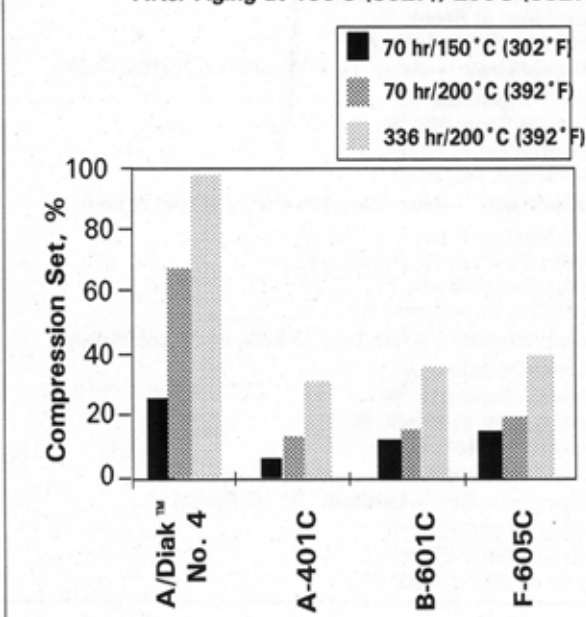


Figure 1c. Compression Set - "B," O-Rings: After Aging at 150°C (302°F), 200°C (392°F)





**Table 1**  
**Viton® A/Diak™ No. 4 versus Bisphenol-Cured Viton® Precompounds**

Compound Designation	A-1	B-1	C-1	D-1	E-1
<b>Compound Formulation</b>					
Viton® A	100	—	—	—	—
Viton® A-201C	—	100	—	—	—
Viton® A-401C	—	—	100	—	—
Viton® B-601C	—	—	—	100	—
Viton® F-605C	—	—	—	—	100
Low Activity Magnesium Oxide	15	—	—	—	—
High Activity Magnesium Oxide	—	3	3	3	3
Calcium Hydroxide	—	6	6	6	6
Blanc Fixe	35	35	35	35	35
Diak™ No. 4	2.5	—	—	—	—
	152.5	144.0	144.0	144.0	144.0
<b>Mooney Scorch —MS at 121°C (250°F)</b>					
Minimum Viscosity—Mooney Units	37	22	43	54	61
Time to Increase 2 pt, min.	14.6	>30	28.0	26.0	21.4
Time to Increase 5 pt, min.	18.5	>30	>30	>30	25.5
<b>ODR at 177°C (350°F), 3° Arc, 12 min Motor</b>					
Minimum Viscosity, M <sub>L</sub> , in-lb	12.3	3.9	10.7	13.3	15.3
Scorch, t <sub>2</sub> , min	1.9	2.6	2.3	4.2	2.2
Maximum Torque, M <sub>H</sub> , in-lb	95.4	88.3	108.3	94.4	89.0
50% Cure, t <sub>50</sub> , in-lb	53.9	46.1	59.5	53.9	52.2
Time to 50% Cure, t <sub>c50</sub> , min	5.0	3.4	3.2	6.2	3.5
90% Cure, t <sub>c90</sub> , in-lb	87.1	79.9	98.5	86.3	81.6
Time to 90% Cure, t <sub>c90</sub> , min	9.1	4.3	4.4	6.8	4.5
<b>MDR at 177°C (350°F), 1° Arc, 12 min Motor</b>					
Minimum Viscosity, M <sub>L</sub> , in-lb	1.2	0.3	1.1	1.5	1.5
Scorch, t <sub>2</sub> , min	1.5	1.2	17.6	3.1	1.3
Maximum Torque, M <sub>H</sub> , in-lb	15.5	13.8	17.6	17.9	11.7
50% Cure, t <sub>50</sub> , in-lb	8.4	7.1	9.4	9.7	6.6
Time to 50% Cure, t <sub>c50</sub> , min	3.4	1.3	1.3	3.5	2.0
90% Cure, t <sub>c90</sub> , in-lb	14.1	12.5	15.9	16.2	10.7
Time to 90% Cure, t <sub>c90</sub> , min	7.5	2.1	2.1	5.2	2.6
<b>Stress/Strain —Original —Cured 10'/177°C (350°F) + Oven—24 hr/232°C (450°F)</b>					
100% Modulus, psi	770	430	500	470	500
Tensile Strength at Break, psi	2,400	1,450	1,600	1,750	1,725
Elongation at Break, %	250	260	265	290	290
Hardness, Durometer A	70	63	64	65	68
<b>Stress/Strain —After Two Weeks at 250°C (500°F)</b>					
100% Modulus, psi	—	400	440	300	290
Tensile Strength at Break, psi	2,075	1,400	1,500	1,275	1,125
Elongation at Break, %	90	265	280	380	470
Hardness, Durometer A	86	65	65	60	66
<b>Δ Stress/Strain —After Two Weeks at 250°C (500°F)</b>					
Δ 100% Modulus, %	—	-7	-12	-36	-42
Δ Tensile Strength, %	-14	-3	-6	-27	-35
Δ Elongation at Break, %	-64	2	6	31	62
Δ Hardness, No. of pt	16	2	1	-5	-2
<b>Stress/Strain —After Two Weeks in 80 psi Steam</b>					
100% Modulus, psi	1,890	610	610	520	520
Tensile Strength at Break, psi	2,250	1,475	1,700	1,675	1,575
Elongation at Break, %	135	250	290	330	315
Hardness, Durometer A	83	69	71	69	70
<b>Δ Stress/Strain —After Two Weeks in 80 psi Steam</b>					
Δ 100% Modulus, %	145	42	22	11	4
Δ Tensile Strength, %	-6	2	6	-4	-9
Δ Elongation at Break, %	-46	-4	9	14	9
Δ Hardness, No. of pt	13	6	7	4	2
Δ Volume Change, %	-0.5	-1.5	-1.8	-2.1	-1.7
<b>Compression Set —Method "B" (O-Rings)</b>					
70 hr at 150°C (302°F)	20	5	6	9	18
70 hr at 200°C (392°F)	46	6	6	10	19
336 hr at 200°C (392°F)	97	30	34	30	42

**Table 2**  
**Bisphenol-Cure Viton® Precompounds**  
**in 60A and 80A Hardness Formulations**

Compound Designation	A-2	B-2	C-2	D-2	E-2	F-2	G-2	H-2
<b>Formulation</b>								
Viton® A-401C	100	100	—	—	100	100	—	—
Viton® F-605C	—	—	100	100	—	—	100	100
High Activity Magnesium Oxide	3	3	3	3	3	3	3	3
Calcium Hydroxide	6	6	6	6	6	6	6	6
Blanc Fixe	15	80	15	80	—	—	—	—
Ti-Pure® R-960 (TiO <sub>2</sub> )*	—	—	—	—	10	60	10	60
	124.0	189.0	124.0	189.0	119.0	169.0	119.0	169.0
<b>ODR at 177°C (350°F), 3° Arc, 12 min Motor</b>								
Minimum Viscosity, M <sub>L</sub> , in-lb	10.5	13.1	16.2	22.9	10.9	12.3	16.3	23.1
Scorch, t <sub>2</sub> , min	2.5	2.0	2.4	1.6	2.7	2.4	2.4	2.1
Maximum Torque, M <sub>H</sub> , in-lb	100.5	133.8	83.5	95.0	96.9	110.1	80.8	78.3
50% Cure, t <sub>50</sub> , in-lb	55.5	73.5	49.9	59.0	53.9	61.2	48.6	50.7
Time to 50% Cure, t <sub>c50</sub> , min	3.4	2.9	3.6	2.4	3.6	3.6	3.8	3.3
90% Cure, t <sub>90</sub> , in-lb	91.5	121.7	76.8	87.8	88.3	100.3	74.4	72.8
Time to 90% Cure, t <sub>c90</sub> , min	4.3	5.7	4.3	3.0	4.0	4.8	4.6	4.1
<b>Stress/Strain — Original at 23°C (73°F)—Cured 10'/177°C + Oven—24 hr/232°C (450°F)</b>								
100% Modulus, psi	340	770	280	680	315	1,030	260	810
Tensile Strength at Break, psi	1,650	1,775	1,850	1,800	1,775	2,325	2,200	1,950
Elongation at Break, %	290	260	300	320	275	175	345	185
Hardness, Durometer A	59	78	61	80	58	76	60	80
<b>Compression Set — Method "B" (O-Rings)</b>								
70 hr at 150°C (302°F)	6	7	12	19	7	8	15	36
70 hr at 200°C (392°F)	8	12	17	22	10	14	22	37
336 hr at 200°C (392°F)	28	30	37	39	29	31	38	56

\*Ti-Pure® is a trademark of the DuPont Company.

**Table 3**  
**Bisphenol-Cure Viton® Precompounds**  
**Blended With Viton® Gum Polymer**

Compound Designation	A-3	B-3	C-3	E-3	F-3	G-3
<b>Formulation</b>						
Viton® A-401C	100	80	60	—	—	—
Viton® A-500	—	20	40	—	—	—
Viton® B-601C	—	—	—	100	80	60
Viton® B-600	—	—	—	—	20	40
High Activity Magnesium Oxide	3	3	3	3	3	3
Calcium Hydroxide	6	6	6	6	6	6
Blanc Fixe	35	35	35	35	35	35
	144.0	144.0	144.0	144.0	144.0	144.0
<b>ODR at 177°C (350°F), 3° Arc, 12 min Motor</b>						
Minimum Viscosity, M <sub>L</sub> , in-lb	10.7	13.1	8.9	13.3	12.3	8.7
Scorch, t <sub>2</sub> , min	2.3	2.1	1.8	4.2	2.4	3.0
Maximum Torque, M <sub>H</sub> , in-lb	108.3	83.5	69.7	94.4	76.7	53.4
50% Cure, t <sub>50</sub> , in-lb	59.5	48.3	39.3	53.9	44.5	31.1
Time to 50% Cure, t <sub>c50</sub> , min	3.2	2.9	2.4	6.2	4.9	4.0
90% Cure, t <sub>90</sub> , in-lb	98.5	76.5	63.6	86.3	70.3	48.9
Time to 90% Cure, t <sub>c90</sub> , min	4.4	3.9	3.4	6.8	5.8	4.5
<b>Stress/Strain — Original at 23°C (73°F)—Cured 10'/177°C (350°F) + Oven—24 hr/232°C (450°F)</b>						
100% Modulus, psi	500	440	320	470	360	245
Tensile Strength at Break, psi	1,600	1,550	1,600	1,750	1,725	1,650
Elongation at Break, %	265	320	380	290	360	530
Hardness, Durometer A	64	62	61	65	63	61
<b>Compression Set — Method "B" (O-Rings)</b>						
70 hr at 150°C (302°F)	6	7	13	9	12	15
70 hr at 200°C (392°F)	8	12	13	10	16	30
336 hr at 200°C (392°F)	28	30	36	30	38	46

For further information on Viton<sup>®</sup> or other elastomers please contact one of the addresses below, or visit us at our website at [www.dupont-dow.com](http://www.dupont-dow.com)

#### **USA – Global Headquarters**

DuPont Dow Elastomers L.L.C.  
300 Bellevue Parkway, Suite 300  
Wilmington, DE 19809  
Tel. +1-800-853-5515  
+1-302-792-4000  
Fax +1-302-792-4450

#### **Austria**

Dolder GesmbH  
Brucknerstrasse 6/3/8  
A-1040 Wien  
Tel. +43-1-504 21 80  
Fax +43-1-504 21 93

#### **Benelux**

N.V. Sepulchre S.A.  
19, av. des Nénuphars  
B.P. No. 6  
B-1160 Bruxelles  
Belgium  
Tel. +32-2-672 23 35  
Fax +32-2-673 67 82

#### **Denmark**

Nordica A/S  
Pilestræde 43  
DK-1112 Copenhagen  
Tel. +45-3315 2855  
Fax +45-3315 2161

#### **Geneva – European Headquarters**

DuPont Dow Elastomers S.A.  
2, chemin du Pavillon  
CH-1218 Le Grand-Saconnex,  
Geneva, Switzerland  
Tel. +41-22-717 4000  
Fax +41-22-717 4001

#### **Finland**

Oy Algot AB  
Nuutisarankatu 15  
SF-33900 Tampere  
Tel. +358-3-266 1948  
Fax +358-3-266 0212

#### **France**

Safic-Alcan  
Département  
DuPont Dow Elastomers  
3, rue Bellini  
F-92806 Puteaux Cedex  
Tel. +33-1-46 92 64 32  
Fax +33-1-46 67 04 42

#### **Germany**

DuPont Dow Elastomers GmbH  
DuPont Strasse 1  
D-61343 Bad Homburg  
Tel. +49-6172-87 13 55  
Fax +49-6172-87 13 51

#### **Italy**

DuPont Dow Elastomers S.r.l.  
16, via A. Volta  
I-20093 Cologno Monzese  
Tel. +39-02-25 302 900  
Fax +39-02-25 302 905

#### **South & Central America Headquarters**

DuPont Dow Elastomers Ltda.  
Alameda Itapecuru, 506 - Sala 12  
Alphaville - Barueri - SP  
CEP 06454-080  
Brasil  
Tel. +55-11-4166-8978  
Fax +55-11-4166-8989

#### **Portugal**

Safic-Alcan Portugal  
Rua D. Marcos da Cruz 1351  
P-4455-482 Perafita  
Tel. +351-22-999 82 90  
Fax +351-22-996 39 27

#### **Spain**

ISISA S.A.  
Rocafort, 241-243  
E-08029 Barcelona  
Tel. +34-93-322 04 53  
Fax +34-93-410 69 78

#### **Sweden**

Nordica Elastomers AB  
Hamntorget 1  
P.O. Box 10104  
S-43422 Kungälv  
Tel. +46-300-73 250  
Fax +46-300-73 251

#### **Switzerland**

Dolder AG  
Immengasse 9  
CH-4004 Basel  
Tel. +41-61-326 66 00  
Fax +41-61-326 62 04

#### **Singapore – Asia Pacific Headquarters**

DuPont Dow Elastomers PTE Ltd.  
1 Maritime Square #10-54  
World Trade Center  
Singapore 099253  
Tel. +65-6275 93 83  
Fax +65-6275 93 95

The information set forth herein is furnished free of charge and is based on technical data that DuPont Dow Elastomers believes to be reliable. It is intended for use by persons having technical skill, at their own discretion and risk. The handling precaution information contained herein is given with the understanding that those using it will satisfy themselves that their particular conditions of use present no health or safety hazards. Because conditions of product use and disposal are outside our control, we make no warranties, express or implied, and assume no liability in connection with any use of this information. As with any material, evaluation of any compound under end-use conditions prior to specification is essential. Nothing herein is to be taken as a license to operate under or a recommendation to infringe on any patents.

**CAUTION:** Do not use in medical applications involving permanent implantation in the human body. For other medical applications, discuss with your DuPont Dow Elastomers customer service representative, and read Medical Caution Statement, H69237.

Viton<sup>®</sup> and Diak<sup>™</sup> are trademarks or registered trademarks of DuPont Dow Elastomers.

Copyright © 1997, 1998, 2002 DuPont Dow Elastomers. All Rights Reserved.

