

# Ultra-PopUp Pool™ 100 Instructions

## Instructions for the 100 gallon unit only.

### Part No. 8100

The 100 gallon Ultra-PopUp Pool™ is a versatile spill response product for a variety of uses: Catching the fluid from leaking saddle tanks and hydraulic lines, or catch-all for many spill applications.

#### HOW TO DEPLOY THE Ultra-PopUp Pool™ FOR USE:

Using the Ultra-PopUp Pool™ is foolproof. Simply remove it from the Carrying Bag, shake lightly and it will instantly open up into its full size, ready for placement under a leak or spill.

STEP 1: Remove PopUp Pool™ from its Carrying Bag.

STEP 2: Shake lightly, allowing PopUp Pool™ to open to its full diameter and size.

STEP 3: Place PopUp Pool™ under the leak, centered under the leak if possible.

#### CAUTION:

- \* Do not use the PopUp Pool™ with chemicals that are incompatible with polyethylene.
- \* Do not use the PopUp Pools™ on inclines greater than 30 degrees. Use on an incline will reduce the containment capacity depending on the incline.
- \* Do not place the PopUp Pool™ over sharp objects or materials.

#### HOW TO REUSE THE Ultra-PopUp Pool™

STEP 1: Remove the spilled contents from the PopUp Pool™. Use sorbents to wipe liner clean.

STEP 2: Wash with a mild detergent and water if necessary and properly dispose of the contaminated solution. Once dry, inspect for tears, pinholes or other performance reducing damage. **Do NOT** place a unit back into service if the unit is damaged, leaking or unable to perform properly. If the PopUp Pool™ is determined to be suitable for reuse, refold the PopUp Pool™ per the Refolding Instructions on the back. Place the PopUp Pool™ back into the Carrying Bag.



11542 Davis Creek Court • Jacksonville, Florida 32256 USA  
(904) 292-1611 • 1-800-353-1611 • FAX (904) 292-1325

**The Leak Stops Here.™**

# HOW TO REFOLD THE 100 Gallon Ultra-PopUp Pool™

**DISCLAIMER:** The manufacturer assumes no liability for any claims arising from the use of this product where the product has been improperly stored, used or folded.


## STEP 1:

Hold the PopUp Pool™ at a 45 degree angle with your hands apart and the PopUp Pool™ pointed towards the floor. Make sure the bottom of the PopUp Pool™ is toward the floor.



## STEP 2:

Push the bottom of the PopUp Pool™ against an immovable object (i.e. a wall) to offer resistance when refolding.

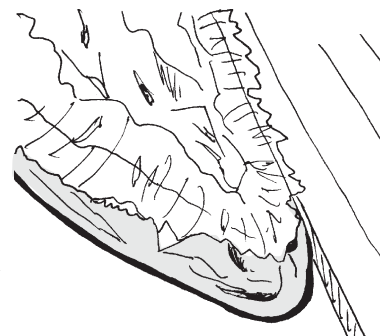

## STEP 3:


NOTE: (A) shown in these steps is used only as a reference point to help show the folding technique.

With the heel of your hands, bend the back of the PopUp Pool™ down slightly.




## STEP 4:

Keep your left hand steady and turn your right hand into the center, toward your body.

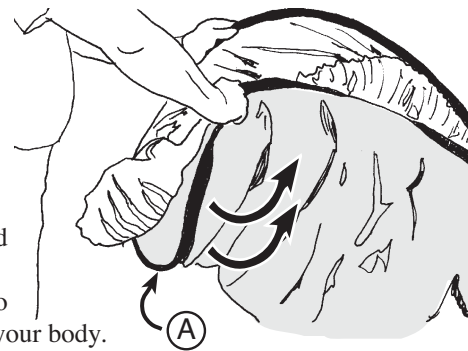


## STEP 5:

Push down with both hands folding the right hand to force point (A) towards the bottom, forming a loop.

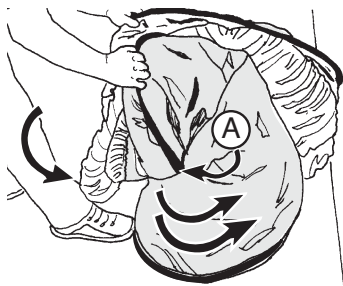

## STEP 6:

Once the right hand has formed the middle loop, push down with the top hand to form the top loop.

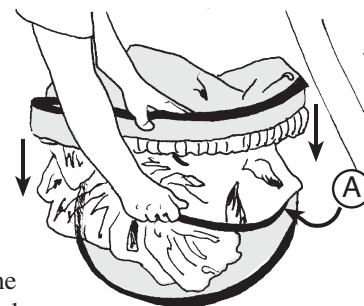

## STEP 7:

Push the air out of the PopUp Pool™. Adjust the loops to equal sizes if necessary. Place the PopUp Pool™ back into the Carrying Bag.



**DO NOT** force the PopUp Pool™ to refold if the sprung steel wire seems to be resisting your folding efforts. Forcing the refolding when done improperly can cause permanent damage to the sprung steel wire and render the PopUp Pool™ less usable or unusable.

**PRACTICE, PRACTICE, PRACTICE.** Once you learn the refolding technique, it should only take 2 - 3 seconds to perform this procedure.

## PROPER STORAGE PROCEDURES

Always store the PopUp Pool™ in its Carrying Bag. This protects the polyethylene from potentially harmful ultra violet degradation. Every 4 - 6 months remove the PopUp Pool™ from its Carrying Bag and inspect it to make sure it is still usable. If it shows signs of wear or deterioration, remove the product from active use and reorder.