




Part # 9234


## ASSEMBLY INSTRUCTIONS

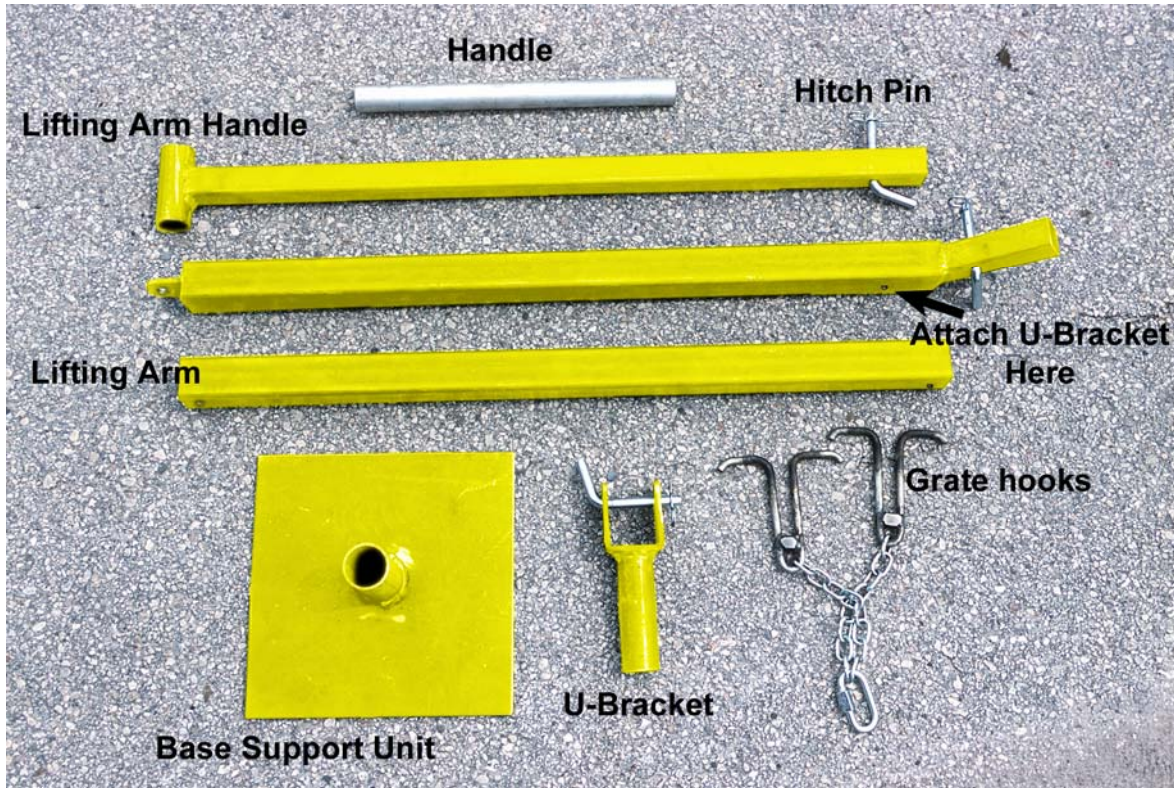

1. Attach the **U-Bracket** to the **Lever Arm** (see photo) by inserting the **Hitch Pin** through the holes
2. Attach the **Lever Arm** to the **Base Support Unit** by inserting the **U-Bracket** into the open pipe on the base
3. Attach the **Lifting Arm** to the **Lever Arm** by inserting the **Hitch Pin** through the holes
4. Attach the **Lifting Arm Handle** to the **Lifting Arm** by inserting the **Hitch Pin** through the holes
5. Attach the **Grate Hooks** to the end of the **Lever Arm** using threaded connector
6. Insert the **Handle** into the **Lifting Arm Handle** to complete the assembly

**NOTE:** Always use the appropriate eye, hand and foot safety gear when assembling or using the Ultra-GrateLifter or other UltraTech stormwater management products.

**OVER**

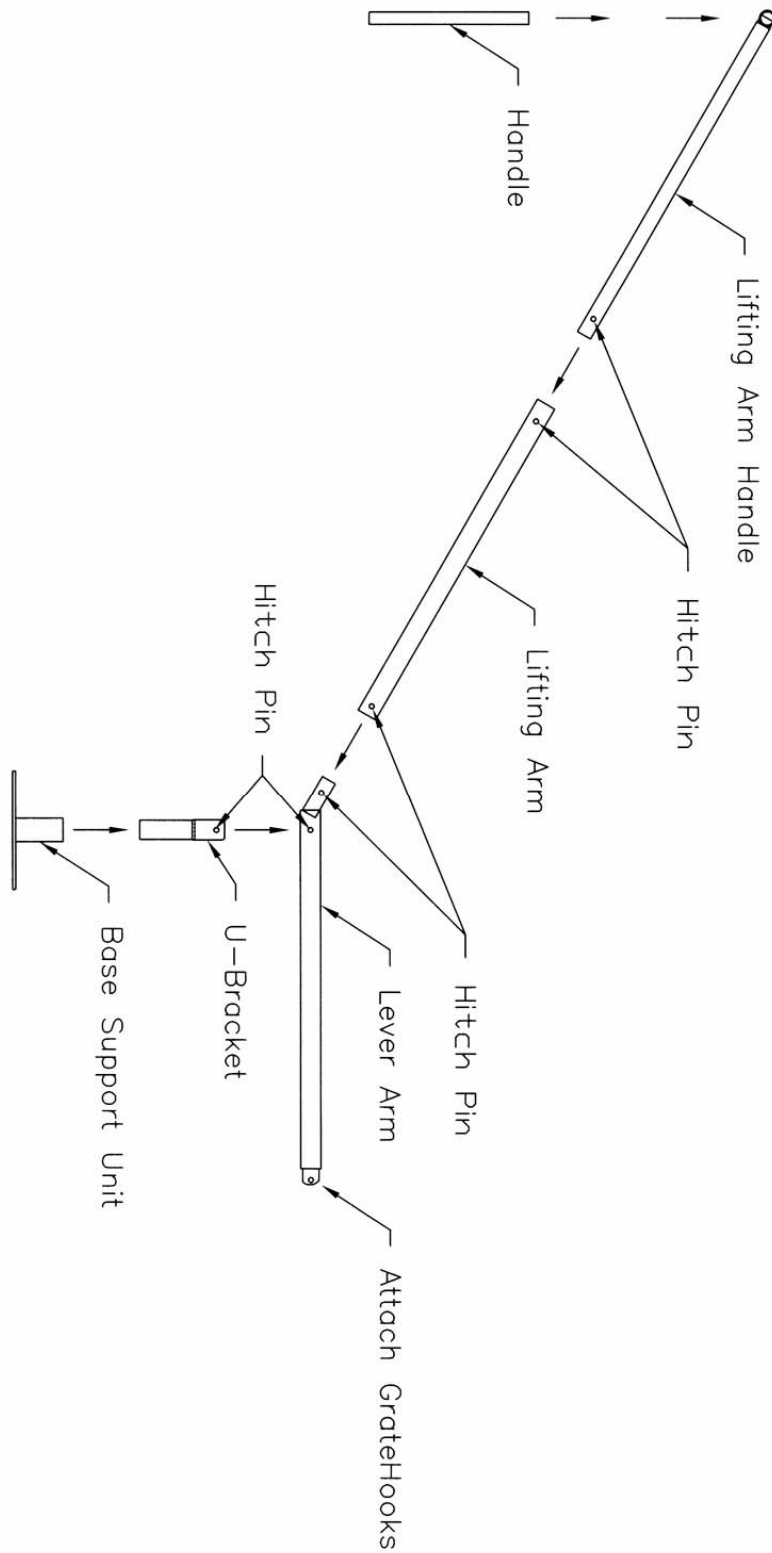

Ultra-GrateLifter®

Other Stormwater Management Products are available from UltraTech. Please call us at (800) 353-1611 for a complete catalog or visit us on the web: [www.Stormwater-Products.com](http://www.Stormwater-Products.com) or for more information on our complete line of environmental containment, spill response, decon and facility protection products. Please visit us on the web: [www.SpillContainment.com](http://www.SpillContainment.com)